



USB Mini Spectrum Analyzer User Manual

TSA Program for PC

TSA4G1

TSA6G1

TSA8G1

Triarchy Technologies Corp.





USB Mini Spectrum Analyzer User Manual

Copyright Notice

Copyright © 2013 Triarchy Technologies, Corp. All rights reserved.

Initial Version July 2013

Documentation version 1.6

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Triarchy Technologies, Corp.

Technical Support

For technical support, please call 1-604-637-2167, send email to info@triarchytech.com, or visit our website at <http://www.triarchytech.com>



Table of Contents

1 GETTING STARTED.....	4
1.1 INSTALL PC APPLICATION.....	4
1.2 UNINSTALL PC APPLICATION:	8
1.3 SYSTEM CONNECTION	9
2. OPERATIONS	9
2.1 PARAMETERS SETTING.....	9
2.2 FREQUENCY SETTING.....	10
2.3 SPAN SETTING	10
2.4 AMPLITUDE SETTING.....	11
2.5 SWEEP TIME SETTING.....	11
2.6 TRACE SELECTION.....	11
2.7 CURRENT TRACE.....	12
2.8 AVERAGE TRACE.....	12
2.9 MAX TRACE	12
2.10 DENSITY MEASUREMENT	13
2.11 MANUAL CALIBRATION.....	13
3. MEASUREMENT SUPPORT FEATURES.....	13
3.1 SELECT MEASUREMENT CURVE	13
3.2 MARKER.....	13
3.3 DELTA MARKER	14
3.4 CHANNEL POWER	15
3.5 LIMIT LINE.....	15
3.6 REFERENCE	15
3.7 HARDCOPY.....	16
3.8 RECORDING.....	16
3.9 DISPLAY MOVING.....	17
3.10 LOCAL AND REMOTE FUNCTION	17
4. DECLARATION OF CONFORMITY.....	17



4.1 FOR MODLE TSA8G1,TSA6G1,TSA5G35, TSA4G1 17

1 Getting Started

1.1 Install PC Application

System Requirements:

To use this USB mini spectrum analyzer, your system must meet the following minimum requirements:

Windows XP, Windows 7, or Windows Vista and Window 8:

- 1 Gigahertz (GHz) or faster 32-bit (x86) or [64-bit \(x64\)](#) processor
- 1 Gigabyte (GB) RAM (32-bit) or 2 GB RAM (64-bit)
- 100 MB hard disk space (Buffered data may need extra space)
- Display resolution shall be better than 1024x768

Insert CD into the computer, open the **SW_ file/TSA/** folder from CD, and click the setup_1.4.exe to install software. When you see the installation window, click “Next”. Please see **Figure 1**

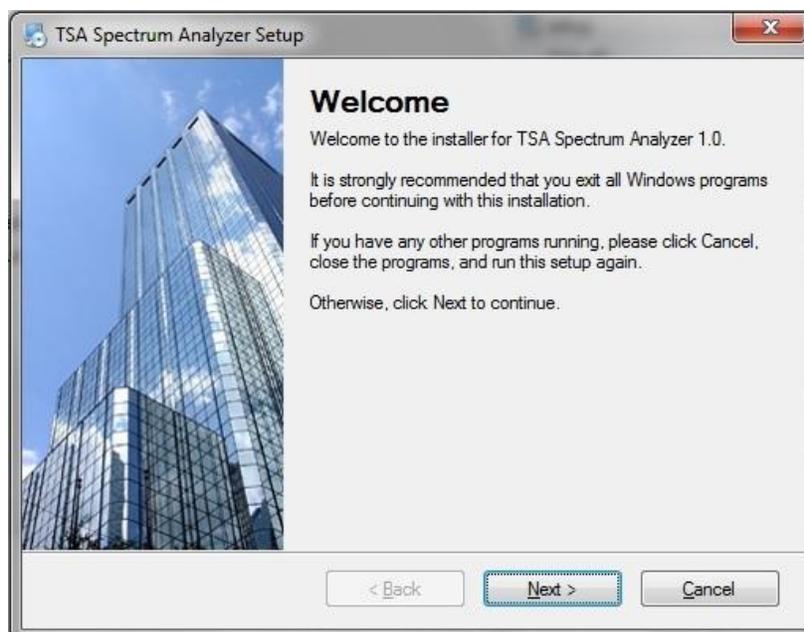


Figure 1 Installation View



Follow the installation instruction to install the PC program.

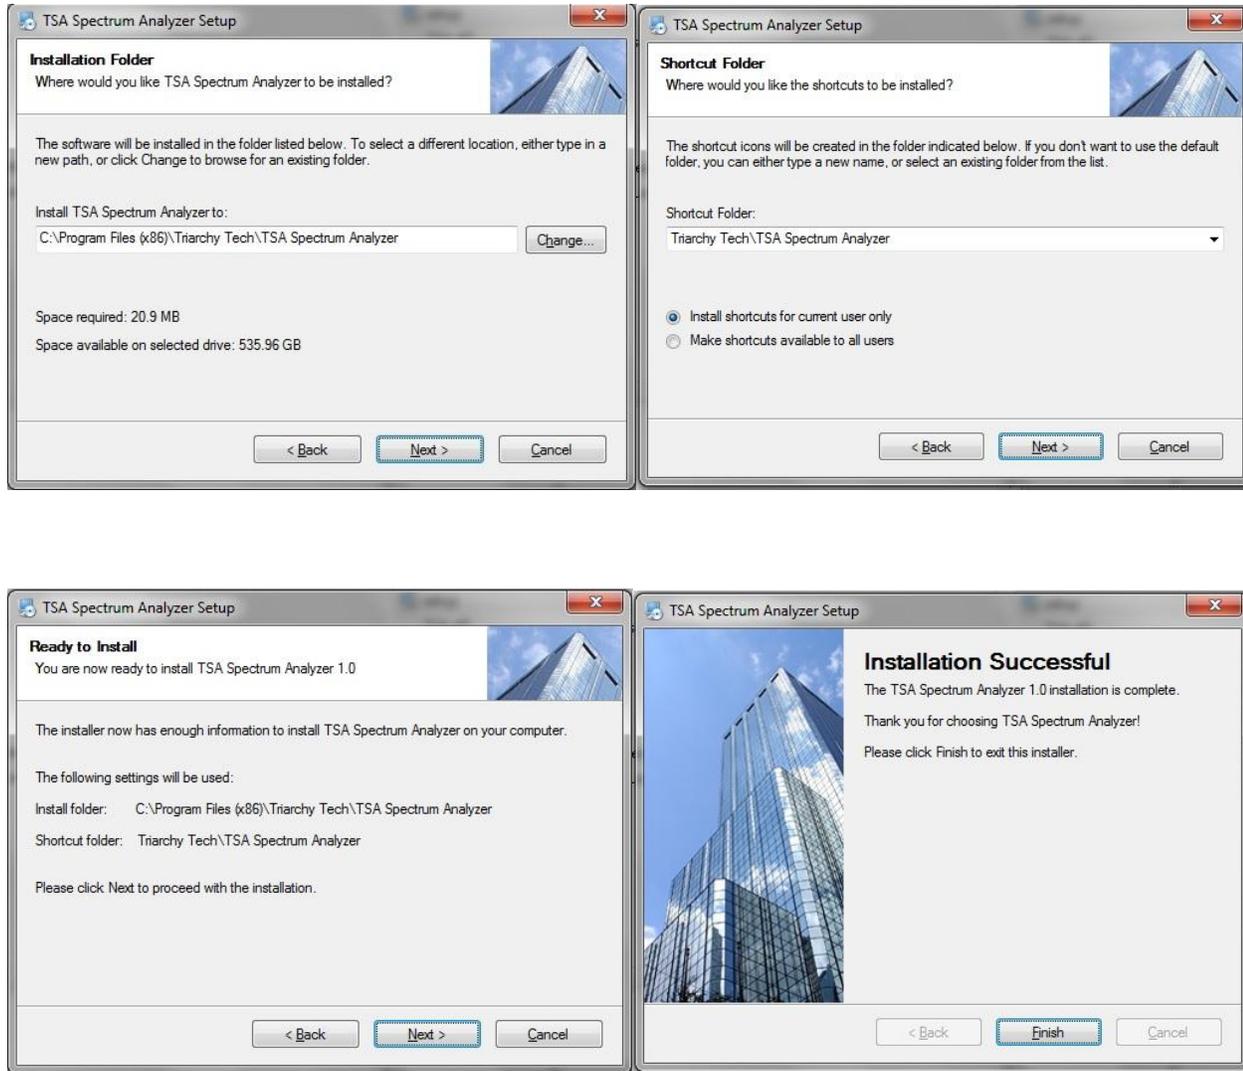


Figure 2 Successfully Installed

After the program is successfully installed, you will get the message “Finish the Installation Completely”, please see **Figure 2**,

TSA program will install at **C:\Program Files (x86)\Triarchy Tech\TSA Spectrum Analyzer**

TSA data folder will be located at Documents, all the log data and Calibration file will put into data folder, the data folder path is **C:\Users\UserName\Documents\Triarchy Tech\TSA Spectrum Analyzer**.

Please see **Figure 4**.

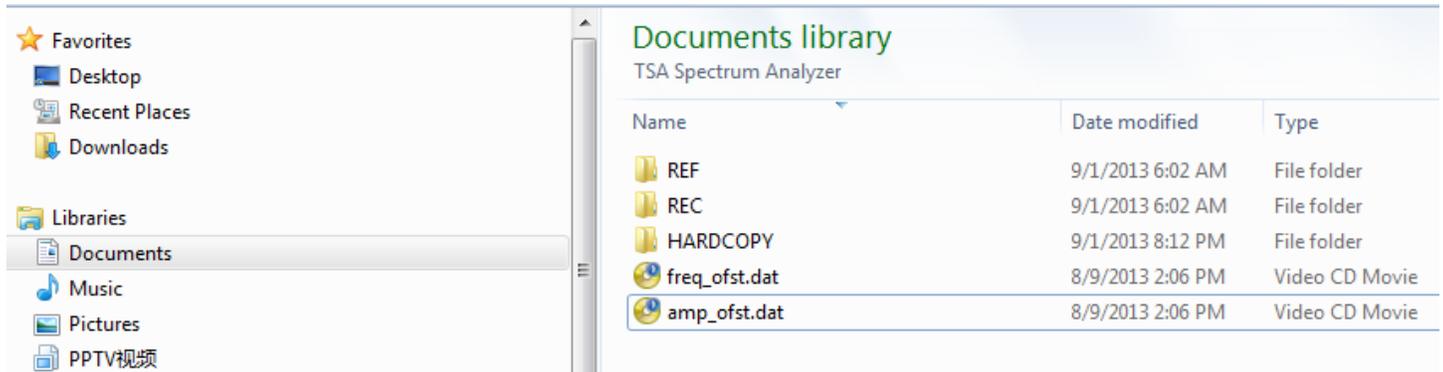


Figure 4 Data Folder View

Do not run the program right away, after you install the PC program TSA as you still need to validate the installation. To validate the installation, please copy the calibration file of **amp_ofst.dat** and **freq_ofst .dat** from the CD to the installation folder to replace the old **amp_ofst.dat** and **freq_ofst .dat file**. The old **amp_ofst.dat** and **freq_ofst .dat file** was demo version, the calibration file in your CD will be related to your ordered device. You must copy it to replace the demo Demo version. Please request these 2 files from support@triarchytech.com if you do not have a CD.

After copying the **amp_ofst.dat** and **freq_ofst.dat** files into Data folder, the program needs to be run as an administrator every time. You can find these settings in the properties menu. Please see **Figure 5**.

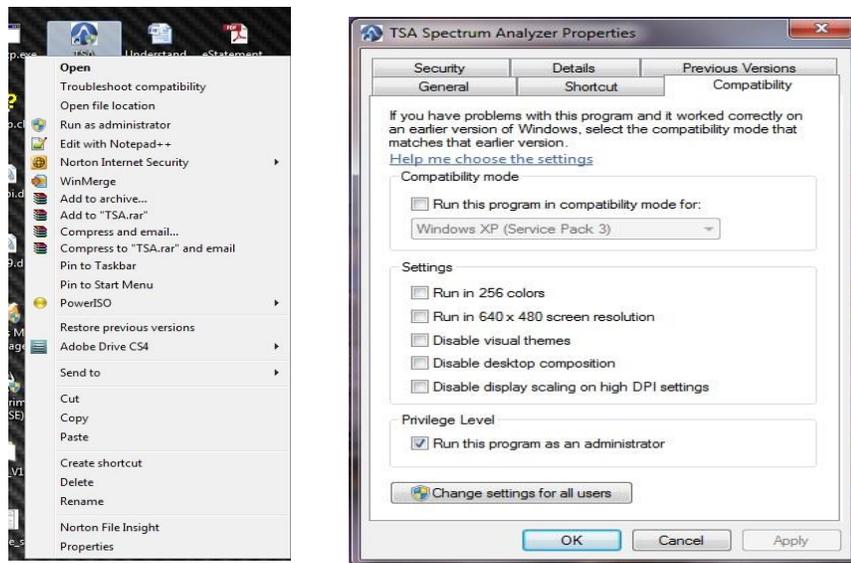


Figure 5 setup Run this Program as an administrator



In properties menu, under Compatibility tab, tick the box for “Run this program as an administrator”.

Then launch the TSA program.

*If clicking on the TSA ICON for Desktop, the “Sorry but can’t find calibration file!” warning appears, **Figure 6**. It means the **amp_ofst.dat** and **freq_ofst.dat file** from CD is missing in the data folder.

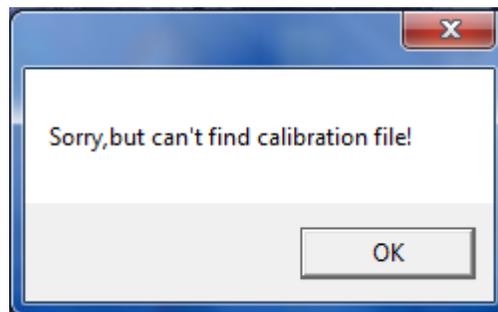


Figure 6 Needs to copy Calibration file

If the installation is successful, you will see spectrum analyzer application start-up window as shown in **Figure 7**.

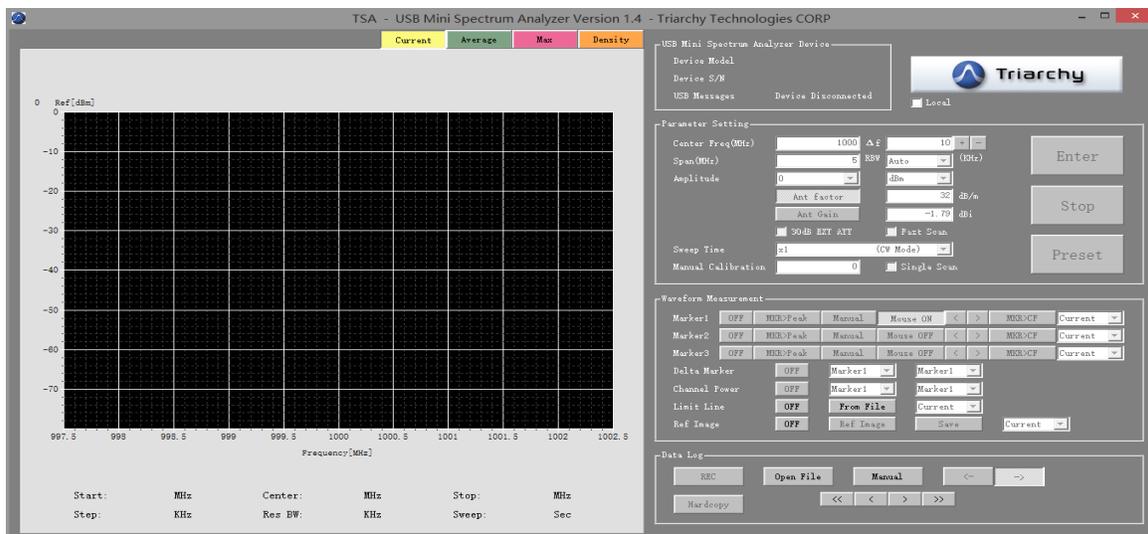


Figure 7 Application Windows before USB Device Connected



Plug the **TSAxGx USB mini spectrum analyzer** into the PC USB port, the program will recognize the USB device and displays Device model and Device S/N. If PC connects to USB device properly, the USB Message is shown Device Connected. Please see **Figure 7**

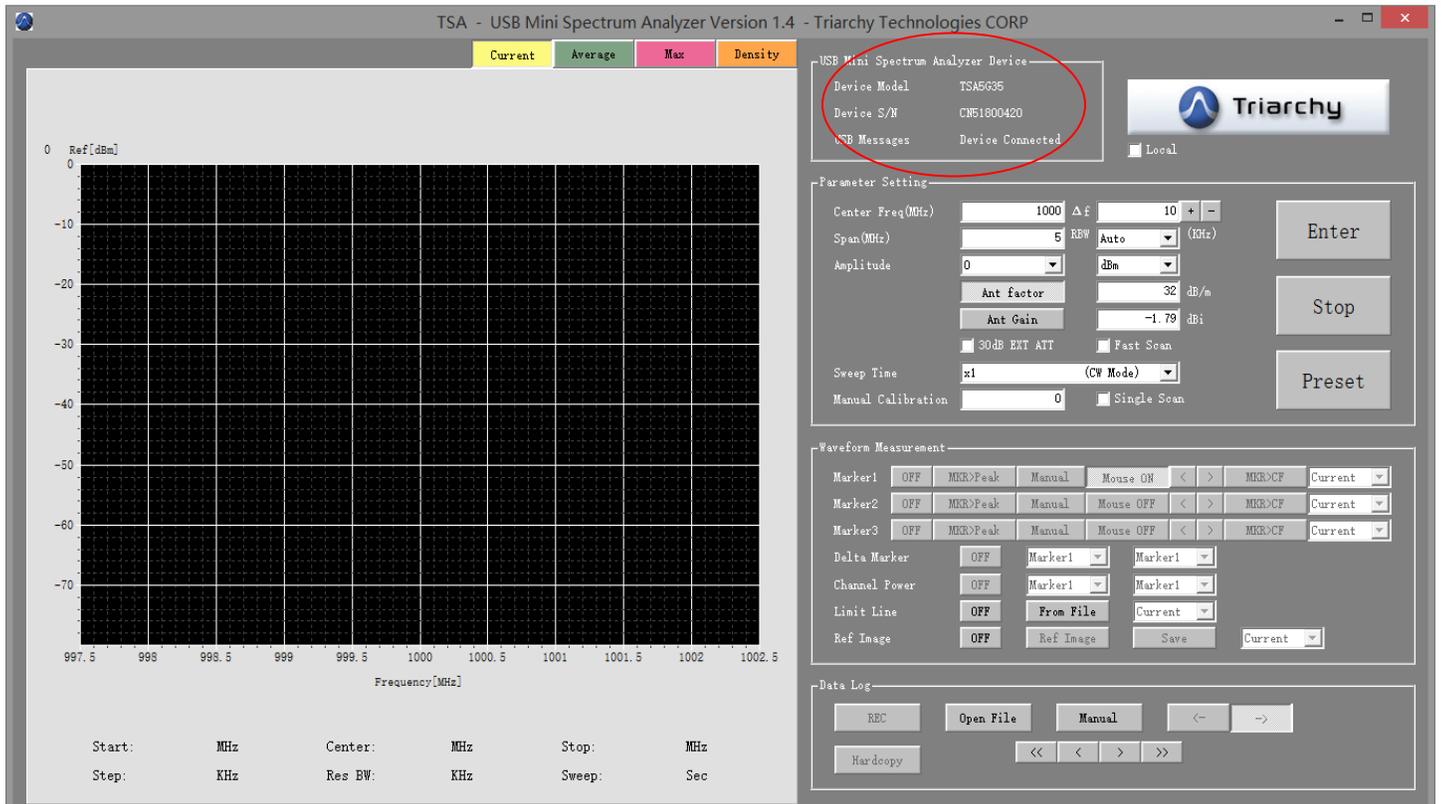


Figure 7 TSA Connected with USB Mini Spectrum Analyzer Device

1.2 Uninstall PC Application:

If you want to uninstall the TSA program, please go to the Start menu, look for the Triarchy Tech folder, then click Uninstall item and follow the instruction. Please see **Figure 8**.

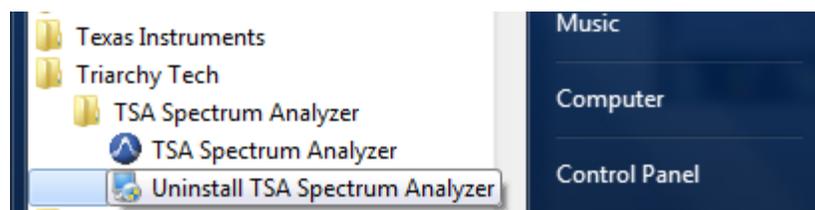


Figure 8 Uninstall View



1.3 System Connection

Figure 9 shows the system connection. TSAxGx connects to the computer through the USB port. The connection between TSAxGx and RF signal generator can be wired via coaxial cable or wireless via antenna. The RF signal generator could be any RF transmission device.



Figure 9 System Connection

2. Operations

2.1 Parameters Setting

When the application starts, the screen displays as shown in **Figure 10**. The default span is 10 MHz, the default reference level is 0 dBm, and the center frequency is 1000MHz.

When a signal presents at the input, the signal spectrum will be displayed. In this example, the signal center is at 1000 MHz. The spectrum display by default shows only the current trace. The average trace, peak trace, and density of the signal level are turned off. If you want to turn on different traces, you can enable different traces by clicking tabs to display.

If you want to change the setting, input value at each block, then click enter key. Stop button is used to stop scanning. When updating a new setting, click enter without clicking the Stop key.

The preset key will push the setting to the default value. That is 1000MHz for freq, 10MHz for SPAN, 0dBm for Amplitude, current display only.

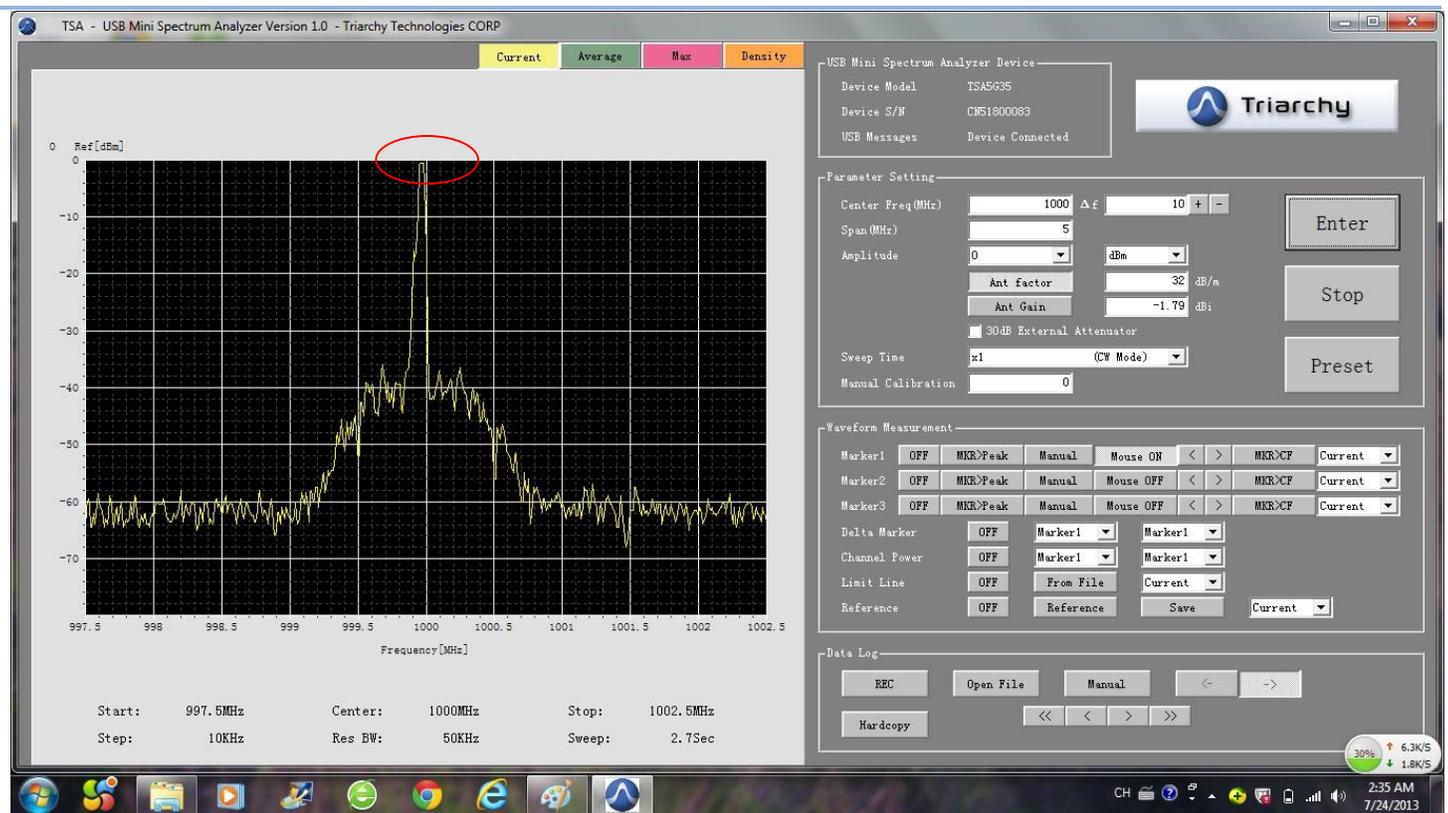


Figure 10 Spectrum Display with Signal Default value

2.2 Frequency Setting

The center frequency is entered into **Center-freq(MHz)**. Then the **TSAXGx** will scan from center_freq - span/2 to center_freq + span/2. The display window will show the signal spectrum after clicking the ENTER button. The valid center frequency range is from 1 MHz to 6150 MHz for TSA6G1 model. If TSA program is connected to another model such as TSA8G1, the frequency range will be 1 MHz to 8150 MHz, please check each model datasheet for detail.

Frequency setting also has step setting function, setup step value, or click “+” / “-” to implement next measurement, and there is no need to click the ENTER key.

2.3 SPAN Setting

The SPAN value can be input by user. SPAN values range will be 1~1000MHz, with MHz as unit and only integer value. The normal speed scanning will have 501 points for one frame scanning; the fast scan will be 250 points. The SPAN value for fast scan will be 6MHz to 500MHz. The speed of scanning will be around 0.2 second.

The RBW can be manually setup if you select in RBW block. The Auto setting is still available if you select AUTO at RBW block



The single scan can be selected by tick on the Single Scan on TSA v1.6 front panel.

The TSA4G1 has two bands; low band is from 1 to 800 MHz and high band from 800 MHz to 4150 MHz. The 800 MHz frequency is the band edge. When SPAN is set at 101 MHz to 1000 MHz, SPAN range cannot cross over the band edge, so that, 1000 MHz SPAN cannot work at low band.

When SPAN setting is from 0.2 MHz to 100 MHz, the span range can cross over the 800 MHz band edge.

For example, if SPAN is set to 500 MHz, the frequency is set at 550 MHz; the SPAN range will be from 300 MHz to 800 MHz. If the frequency is set to 700 MHz, the SPAN range is still keep at 500MHz, the TSA will pop up the warning message to remind the user to enter a proper value for the span.

TSA6G1, TSA8G1 has band 1 and band 2, the frequency range will 1MHz to 5000MHz. Band 1 of TSA6G1 and TSA8G1 is simliar to TSA4G1, it still need to take care of 800MHz band edge issue.

The SPAN setting cannot cross over the band1 and band2 in the TSA6G1, TSA8G1.

When TSA is working at fast scan, if SPAN less than 50MHz, frequency can be free setup, if SPAN large than 50MHz, frequency band can not be cross the some special points: 800MHz, 1650MHz, 3350MHz and 5000MHz.

2.4 Amplitude Setting

The amplitude setting will depend on the signal level to be measured. If the signal is small, the 30 dB attenuator doesn't need to be added, the reference level will be from -60 dBm to 0 dBm at 10 dB step. If the large signal is to be measured, the 30 dB attenuator will need to be added, and to mark **external ATT (30 dB)** at TSA panel. The reference level will be from -30 dBm to 30dBm at 10 dB step.

The reference level in the band 2 in TSA6G1 and TSA8G1 will shift 20dB, please check the datasheet.

The amplitude the unit can be set to dBm, dBuv, dBm, dBuv/m, dBm/m2.

When you select dBuv/m, and dbm/m2, it means to use USB spectrum analyzer to measure the field strength, it will be related to the antenna parameter: antenna factor or antenna gain. You shall input antenna parameter. These parameters are related to the frequency, you shall choice proper parameter at your application band.

2.5 Sweep Time Setting

When the sweep time is slow, the **TSA4G1** will do oversampling. The oversampling time interval will be 3us. The sweep time needs to be selected based on what kind of signal will be measured.

If the signal to be measured is continuous wave (CW), select x1 (CW Mode).

If the signal to be measured is continuous modulation signal, select x1.5 (Burst Mode)

If the signal to be measured is packet data signal, select x2(Burst Mode) or x4(Burst Mode), or larger.



2.6 Trace Selection

The current trace, average trace, max trace, and density of the measured signal can be turned on or off individually by clicking on the corresponding button on the screen as shown in **Figure 11**, which shows that current trace and density are turned on. Average trace, and max trace are turn off

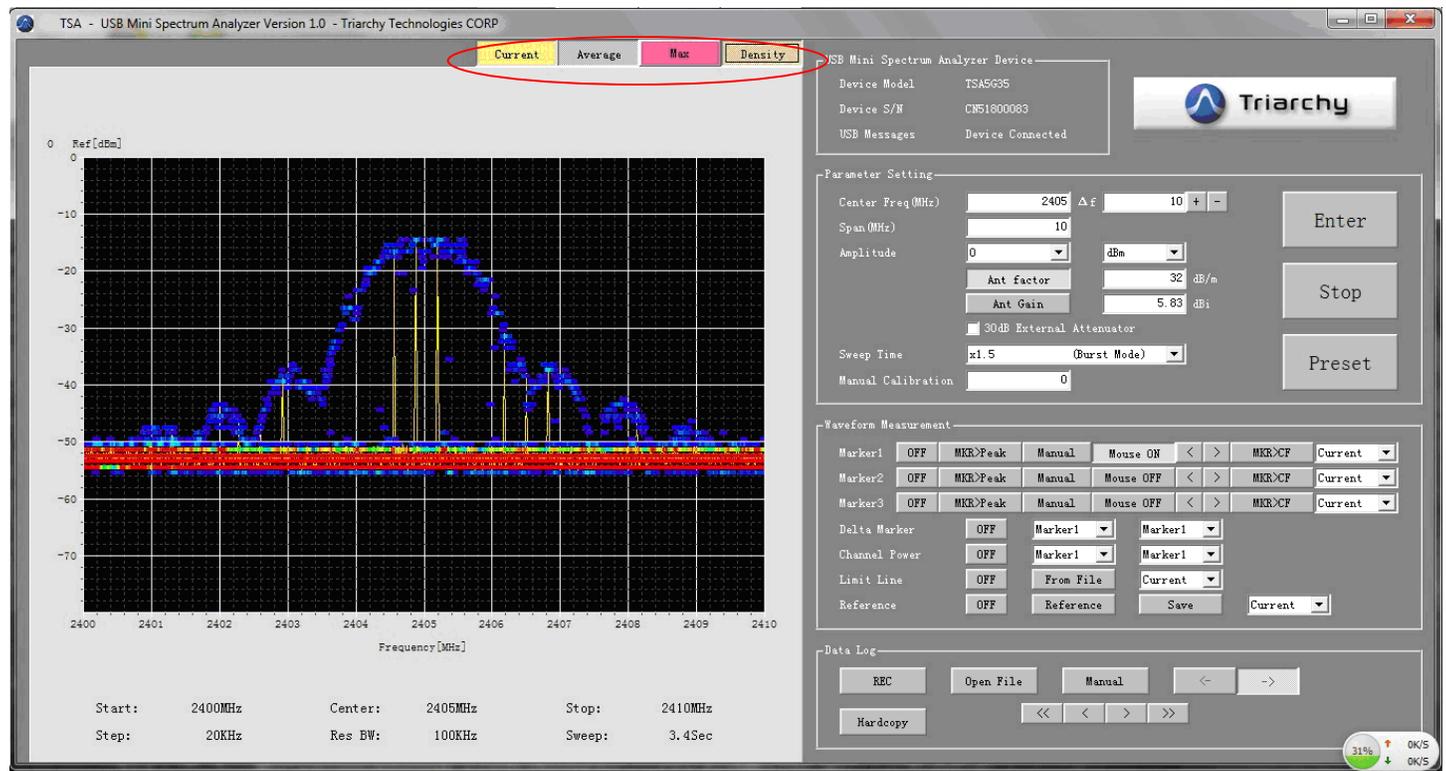


Figure 11 Current Trace and Density Trace are Turned on

2.7 Current Trace

The current trace is to display the real time signal spectrum, and the default display will be current trace. The current trace will be updated with each scan over the frequency range. When the input signal is changed, the current trace will change immediately. When the device is used to measure the modulated signal and packet signal, you need to increase the sweep time to get a better spectrum waveform.

2.8 Average Trace

The average trace is adopted 16 points of moving average algorithm. It can reduce the signal noise when measuring CW signal. It will conjecture the signal repeat rate for modulated or packet signal measurement, if the average trace is very low comparing to the max trace, it means the signal repeat rate is very low.



2.9 Max Trace

The max trace will hold the maximum signal level with each scan. Max trace can be used to measure the modulated signals, and random signals. The max trace will show envelop of modulated signals. When you do an EMC test, you can use the max trace to pick up the max signal.

2.10 Density Measurement

The density image will show the modulated signal with the detailed signal energy distribution, even when two signals are overlapped, you can still watch and find the two signals from the density image. It is very useful to analyze the modulated signal.

Since density measurement will use up a lot PC computing resource, the default option for density measurement is off. For a low performance PC, turning on this option may cause PC to respond slowly.

2.11 Manual Calibration

Input one value, the waveform will be up and down to follow the input value.

If external attenuator is used (not 30dB), Manual calibration will be compensated the attenuation value.

If connection cable have large insertion loss, Manual calibration will be compensated the attenuation value.

Manual calibration is temporarily solution for customer to adjust signal level. It shall put into "0" when you don't use this feature.

3. Measurement Support Features

There are measurement support features, including **Marker**, **Delta marker**, **Channel power**, **Limit line**, **Reference trace**, **Recording**, and **Image Hardcopy**.

3.1 Select Measurement Curve

When selecting **Measurement** functions, you shall choose which curve to be measured. There are **Current**, **Average** and **Max** curves, please select one in **Select Curves** window. The **Select Curve** windows are located last item of each function in the waveform measure.

3.2 Marker

Three are total three marker can be used:

ON/OFF, turn on and turn off the marker

MKR>PEAK, force the marker to max signal point after marker is turn on.

Manual/Auto, setting will continue to trace the marker to peak point, and Manual one time searches the peak point after click the MKR>PRAK.



Mouser On/Off, if mouse on is selected, marker will be moving by mouse cursor, mouse cursor must be located at curve, and click it, then the marker can be moved, it is easy way to move the marker. There are total three Mouse On/Off keys; only one key can be turn on.

< left moving key, click it, marker will left moving.

> Right moving key, click it, marker will right moving.

MRK>CF, click it, the marker will be used as center frequency to do new measurement.

Figure 12 shows the marker function.

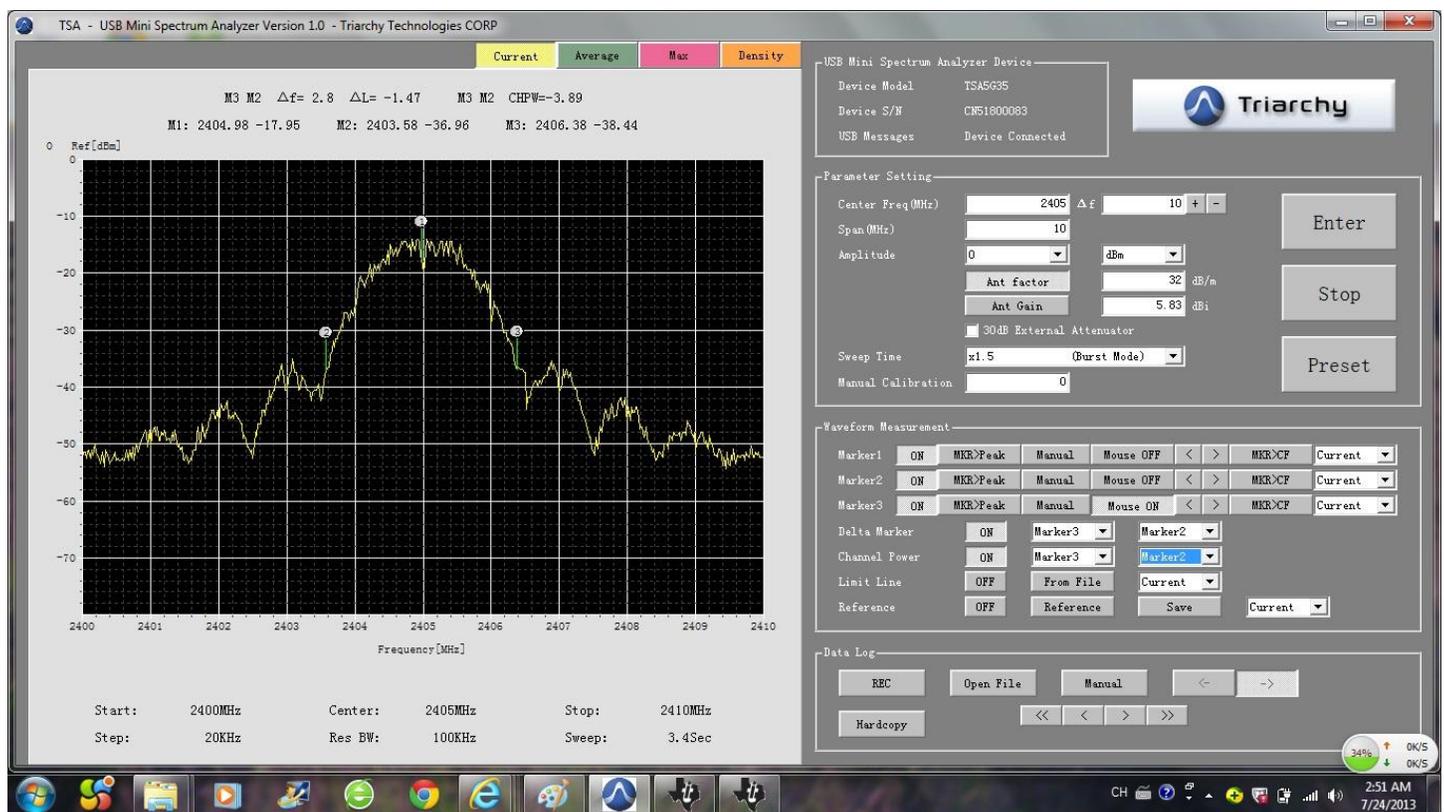


Figure 12 Marker, Delta Marker, Channel power

3.3 Delta maker

First, it needs to turn on more than two markers. Moving the marker to the proper the location.

Select two markers to do Delta marker function.

A lot parameter can be measured by properly setting the maker position such as BW, dBc,



3.4 Channel power

Select two points of markers to do channel power calculation, it is more useful to measure the modulation signal.

You can measure the main channel power; also can measure the adjacent channel power by setting different marker location. Then you can calculate the ACPR (adjacent channel power ratio)

3.5 Limit line

The limit line will be used in the production line, if the signal larger than limit line, it will show PASS, if the signal is smaller than limit line, it will show FAIL.

The limit line will load from Excel file which will define the limit line template, it will be total 501 point data at first column of excel file; customer can define any kind of template by writing the Excel data. The file will save at **C:\Users\Username\Documents\Triarchy Tech\TSA Spectrum Analyzer\REF**

3.6 Reference

The reference function will capture any waveform as reference image to shown on the display. The reference also can be saved as file. The limit line function can load this file and show up. The reference can be used for comparing the measurement. Please see **Figure 13**. The reference curve is Zigbee signal with continually modulation, and current is shown the burst modulation of Zigbee signal.

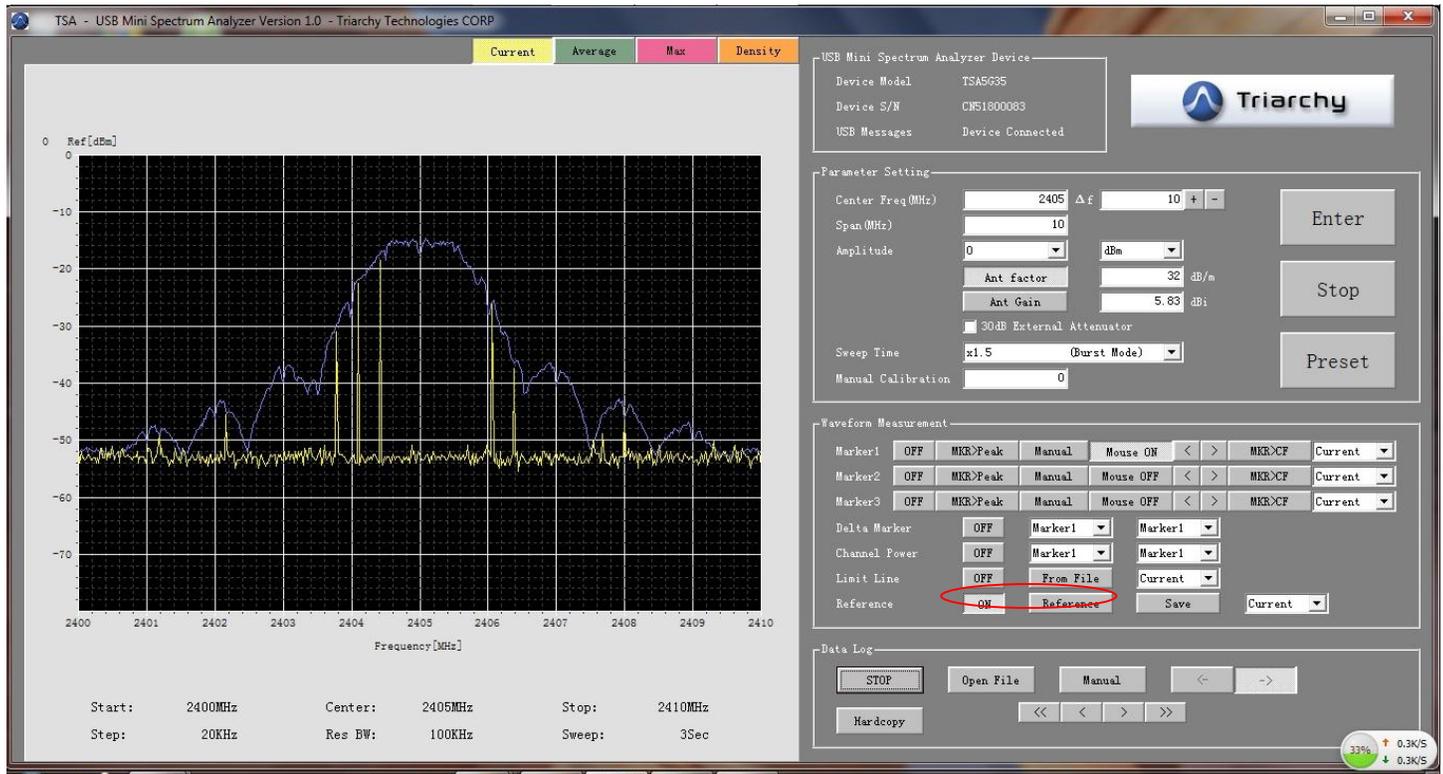


Figure 13 Reference on Display

3.7 Hardcopy

Click the hardcopy key, the waveform image and data will be hardcopy into **HARDCOPY** folder **C:\Users\UserName\Documents\Triarchy Tech\TSA Spectrum Analyzer\HARDCOPY**. There are total four files generated, one is JPG image file, and three Excel data file which related to the current, Average and MAX.

3.8 Recording

Click the REC key the waveform can be recording, the record information will be saved as file at **C:\Users\UserName\Documents\Triarchy Tech\TSA Spectrum Analyzer\HARDCOPY**

Click stop to save the record file and stop the recording.

The record can be reviewed by loading file.

The record has two modes to review: Manual and Auto.

Manual: click < or > to move one frame to view. Click << or >> to move block of frame to view.

Auto: -> is normal play, <- is back play.



3.9 Display moving

Right click the mouse key when mouse cursor in the display area, then moving the roll on the mouse, the waveform of display can be scrolled up and down.

3.10 Local and Remote function

The TSA v1.6 support remote function. If you tick the local box, it will change to remote. The TSA v1.6 will work in remote mode. The TSAxGxx hardware dongle do not have to be connected to PC USB port. Hardware dongle may work from remote locations, such as a different city or a different country via internet. Please check the application note for TSA USB Adapter USB2RJ45, USB2WIFI and USB2RS232 for detailed setup.

4. Declaration of Conformity

4.1 For model TSA8G1, TSA6G1, TSA5G35 and TSA4G1

We

Triarchy Technologies Corp

67-15233 34th AVE Surrey BC V3S 2T7 Canada

declare that

TSA8G1, TSA6G1, TSA5G35, TSA4G1 USB mini Spectrum Analyzer

In accordance with the following directives:

2004/108/EC The Electromagnetic Compatibility Directives

has been designed and manufactured to the following specifications:

Emissions:

EN 61326-1:2006/CISPR11:2009 Radiated Emissions Class B

Immunity:

EN 61326-1:2006/EN61000-4-2 Electrostatic Discharge

EN 61326-1:2006/EN61000-4-3 Radiated Immunity

EN 61326-1:2006/EN61000-4-4 Electrical Fast Transients

EN 61326-1:2006/EN61000-4-6 Conducted Immunity